
IMPAX TSS-NET

IMPAX Time Saver System: TSS Viewing Software

Machine		Current Status			Daily Status		
Machine Name	Machine Status	Current PPM	PPM Efficiency	Current Production	Today's OEE	View OEE Details	View Machine Details
Header 1	UP	95	95.0%	92%	33.00%	<input type="checkbox"/>	View Details
Header 2	UP	97	97.0%	95%	30.15%	<input type="checkbox"/>	View Details
Header 3	DOWN	0	0.0%	12%	11.43%	<input type="checkbox"/>	View Details
Header 4	UP	102	102.0%	99%	92.66%	<input type="checkbox"/>	View Details
Header 5	UP	82	82.0%	90%	89.75%	<input type="checkbox"/>	View Details
Roller 1	UP	54	54.0%	62%	68.52%	<input type="checkbox"/>	View Details
Roller 2	DOWN	0	0.0%	56%	55.55%	<input type="checkbox"/>	View Details
Roller 3	DOWN	0	0.0%	1%	1.23%	<input type="checkbox"/>	View Details
Roller 4	UP	87	87.0%	90%	89.54%	<input type="checkbox"/>	View Details
Roller 5	UP	90	90.0%	86%	87.78%	<input type="checkbox"/>	View Details


IMPAX TSS-NET Manual, Revised for TSS-NET Code Version 2.31, August 2009
Manual by Steven Noto

Process Technologies Group, Inc. 30W106 Butterfield Road, Warrenville, Illinois 60555
630-393-4777 Fax: 630-393-4680
www.impaxptg.com www.impaxtss.com impaxptg@aol.com

Table of Contents

Table of Contents.....	1
1: Introduction.....	2
2: Installation.....	4
2.1: System Requirements.....	4
2.2: Installation Procedure	4
3: Basic Operation	8
3.1: Opening TSS Viewer	8
3.2: Closing TSS Viewer.....	9
3.3: Navigation.....	9
4: Data Viewing	10
4.1: Summary View	10
4.2: Detail View	11
4.3: OEE View	14
4.4: Menu Options	15
4.5: Printing.....	16
5: Data Collection and Reporting	16
5: Data Collection and Reporting	17
5.1: Overview	17
5.2: Data Collection Settings	17
5.3: Saved Data Files	18
5.4: Generating Reports.....	18
6: System Setup.....	20
6.1: Editing Machine Names.....	20
6.2: Editing Machine Settings.....	21
6.3: Editing Downtime Reasons	21
6.4: Setting Machine Clocks	22
6.5: Setting Machine Schedules.....	22
6.6: Editing Pending Parts.....	25
6.7: Viewing and Sending Messages	26

1: Introduction

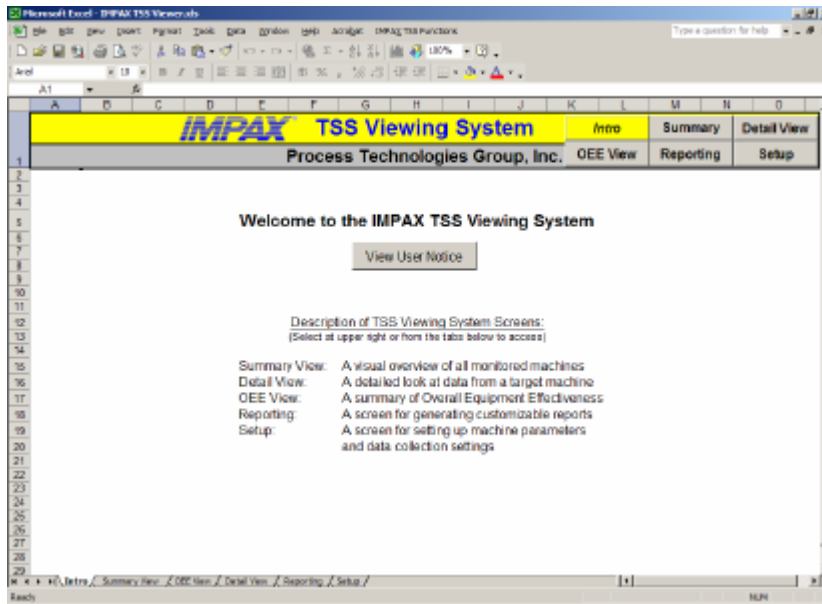

The IMPAX Time Saver System (TSS) Viewing System is a software system that allows viewing and collecting data from a network of IMPAX TSS monitors. It runs on a computer connected to the network of TSS units, and displays real-time data from the TSS units and the machines they are monitoring. It can present summary data for all machines, and also present detailed information on each machine. All data collected by TSS monitors can be viewed through the Viewing System, and data can also be periodically saved to disk, for later reporting and analysis, or for importing into other databases. This manual describes how to install, set up, and use the features of the IMPAX TSS Viewing System.

The IMPAX TSS Viewing System software consists of a Microsoft Excel workbook, running in tandem with a data server program, DSDataServer. The data server connects to the TSS monitors to request and send data, and the Excel workbook provides the user interface to view and analyze all machine data. Using Excel, data may also be periodically saved to disk for analysis.

User Notice

This IMPAX TSS System contains valuable confidential and proprietary information of Process Technologies Group, Inc. No part of the installed software, screen layouts, or other materials may be transmitted, distributed, copied, photocopied, scanned, reproduced, translated or otherwise duplicated on any medium without written consent of the owner. If such consent is given, the same confidential, proprietary and/or copyright notices must be affixed to any permitted copies as were affixed to the original. Use of the software programs contained herein this IMPAX TSS SYSTEM are subject to applicable license agreements, usage guidelines, and non-disclosure agreements. Unless specifically otherwise agreed, all rights, title, and interest to the software programs, screen layouts, and other material contained herein remain with Process Technologies Group, Inc. or the owners of such software and material.

Process Technologies Group, Inc. assumes no responsibility for any inaccuracies that may be contained in the software programs, screen layouts, or other material. In no event will Process Technologies Group, Inc. be liable for direct, indirect, special, incidental or consequential damages resulting from any defect or omission in this IMPAX TSS SYSTEM, its software programs, screen layouts or other material, even if advised of the possibility of such damages. Except as otherwise agreed in a license agreement, use of the IMPAX TSS System, software programs, screen layouts, and other materials contained herein are AS IS WITHOUT WARRANTY INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

COPYRIGHT 2002-2009 PROCESS TECHNOLOGIES GROUP, INC.

2: Installation

This section explains how to install and configure the IMPAX TSS Viewing System.

2.1: System Requirements

The IMPAX TSS Viewing System requires the following:

Windows 98 Second Edition (Windows 2000 or XP are strongly recommended, due to improved DDE support. Windows Vista is not yet recommended)
Note that Administrator access to the computer may be required.

Microsoft Excel 2000, to run the TSS Viewer
(Excel XP/2003 or better is strongly recommended, due to increased stability)

Ethernet networking card, to communicate with TSS monitors
(10 Megabit or faster)

CD-ROM Drive, to load the TSS software from CD

2.2: Installation Procedure

Follow these steps to install the IMPAX TSS Viewing System:

Step 1: Ensure IMPAX TSS monitors are networked correctly

For the Viewing System to display and collect data from TSS monitors, all the monitors must be on the same network as the computer running the Viewing System. This means that the monitors and computer must be connected by some combination of Ethernet cabling, Ethernet hubs/switches, and/or wireless Ethernet bridges. Please ensure that the right type of Ethernet cables (standard vs. crossover) are used, according to the specifications of the hubs/switches used. Note that the TSS system can share a network with other computers or office equipment, as long as each TSS monitor has a unique I.P. address (see below).

Most problems with later installation steps can be traced back to network problems. Please ensure that all cables are undamaged and connected correctly.

After the network is in place, the next step is to install the software for the Viewing System. To do this, insert the TSS-NET CD into the computer's CD drive. The TSS-NET Main Menu installation program should appear (If it does not, select "Run" from the Start Menu, and type in "D:\TSSNETmenu.exe", where "D" is the letter of the CD drive).

Note: For the following steps of the installation, administrator access to the computer may be required. If your computer is part of a company network, you may need local networking staff to give you administrator access to install the software.

Step 2: Install DSDataServer

DSDataServer is the program that will access machine data across the network. Once the TSS-NET CD is in the computer and the TSS-NET Main Menu has opened, select “Install DSDataServer.” The DSDataServer installation program will then run and ask for a Product Keycode. Enter the keycode ALWB-7ML8-9UHA-9YKE, and select “Install.” Then follow the prompts to complete the installation. When installation is complete, the TSS-NET Main Menu should be visible again.

Step 3: Install NetEdit

NetEdit is a program used to configure the monitors’ Ethernet addresses and diagnose any networking problems. From the TSS-NET Main Menu, select “Install NetEdit.” The NetEdit installation program will then run. Follow the prompts to complete installation. When installation is complete, the TSS-NET Main Menu should be visible again.

Step 4: Install TSS-NET

TSS-NET is the Excel-based Viewing System that displays and collects TSS monitor data. From the TSS-NET Main Menu, select “Install TSS-NET.” The TSS-NET installation program will then run. Follow the prompts to complete installation. When installation is complete, the TSS-NET Main Menu should be visible again.

Step 5: Install Acrobat Reader (Optional)

Acrobat Reader is an optional PDF reader program, used to read the online versions of the IMPAX TSS and TSS-NET manuals. If Acrobat Reader is not already installed on the computer (it comes pre-installed on many computers), select “Install Acrobat Reader” and follow the prompts to complete the installation.

When the above steps have been completed, the TSS-NET Main Menu can be closed, and the CD may be removed from the CD drive. Several one-time configuration steps need to be done, and then the TSS Viewing System may be used.

Step 6: Configure Computer Networking

The computer's network settings should be checked. Network settings can be viewed as follows:

In Windows XP/2000: In the Start Menu, select Settings, then Network Connections. Select the connection associated with the Ethernet card, and click "Change settings of this connection."

In Windows 98: In the Start Menu, select Settings, then Control Panel. Then select Network.

This will bring up a properties window with a list in it. In the list, look for an entry containing the phrase "IPX/SPX." If present, networking is configured correctly: close the window.

If the entry is missing, it can be added to allow for easier networking configuration. It is possible to run TSS-NET without IPX/SPX, but you may need installation assistance from IMPAX. Note: If your computer is part of a company network, you may need local networking staff to give you administrator access to enable IPX/SPX or TCP/IP.

To add IPX/SPX, first click on "Add" or "Install." Then Select "Protocol" and then "Add" again. If using Windows 98, then select the "Microsoft" category. Then look for an entry that contains the phrase "IPX/SPX," select it, and hit OK. Then follow the prompts to complete the protocol addition (a reboot may be required). When completed, there should be an entry containing "IPX/SPX" in the networking properties window.

Step 7: Configure TSS Network (I.P.) Addresses

Next, the network address (I.P. Address) of each TSS monitor must be configured. To do this, open the NetEdit program (installed in step 3) from the Start Menu: Programs -> AutomationDirect Tools -> NetEdit 3. In the main NetEdit window, select "IPX" (or "TCP/IP" if IPX was not installed) and then "Scan Network." A list entry should appear for each TSS monitor ("Scan Network" may need to be pressed several times. If there is no response, check the networking connections).

For each TSS monitor, right-click on its list entry and select "General." This will open a window where the Module ID and the I.P. address can be configured. To use IPX for network connections (the default), give each monitor a unique Module ID, between 1 and 255. To use TCP/IP, give each monitor a unique IP address beginning with 192.168 (please check with any local networking staff to obtain valid I.P. addresses). Then select "OK."

When addresses have been entered for each monitor, select the protocol being used (IPX or TCP/IP) and select Scan Network again. Each TSS should show up again, with the proper address. After this, NetEdit can be closed, and should not need to be run again, unless it is desired to change monitor Ethernet addresses.

Step 8: Configure DSDataServer

After each TSS monitor has been given an address, DSDataServer can be configured to use these addresses to collect machine data. Open DSDataServer from the Start Menu: Programs -> DirectSOFT 4 -> DirectSOFT32 Data Server Tools -> DirectSOFT32 Data Server. The data server will open, after it pauses to scan the network.

After DSDataServer opens, links to the TSS monitors must be initialized. To do this, select Setup->Links. Choose to "Add" a new link. Select "Ethernet" and "Next." On the next screen, select "IPX" or "IP," depending on which protocol is being used (default is IPX). A list of networked monitors should appear in the next screen (If it does not, click "Query" several times. If there is no response, check the networking connections). Select one monitor and click "Next." The data server should be able to connect to the monitor, and will ask for a Link Name and Description. Enter any name, such as "TSS monitor 1," and select "Finish" to create the link. Repeat this process for each TSS monitor that appears in the list. When finished, the "Links" list should show all networked TSS's.

After the links have been set up, exit the "Setup Links" window, and select Setup->Topics. Choose to "Add" a new topic. Type exactly "Machine001" as the Topic Name. Then click on "Comm Link" and select one of the links. Select "OK" to create the topic. Repeat this process to create additional topics for each link, naming them "Machine002," "Machine003," and so on.

When this process is complete, DSDataServer has been successfully configured. It should always be opened before the TSS Viewer, since the viewer needs the data server to access the TSS monitors.

Step 9: Open TSS Viewer

After all of the above steps have been completed, the TSS Viewer may be used. Follow the steps in the Section 3.1 below to open the data server, open the Excel-based Viewing System, and enable the system's Excel macros (Excel's macro security settings may need to be changed, as described in the next section).


Once the Viewing System has been opened, machine data should be visible in Excel worksheets. Settings such as number of machines and machine names can now be configured, as shown in Chapter 6, System Setup. If machine data does not display, or displays as an Excel error ("#N/A" or "#REF!") for more than a minute, make sure that DSDataServer is running. If it is running, open it and look at the boxes next to the topics Machine001, etc. These boxes should be green when the data server is communicating with TSS monitors. If they are red, yellow, or grey, there is a network error. Check the network connections, link settings, and topic names for errors, close the TSS Viewer and DSDataServer, and restart them.

3: Basic Operation

3.1: Opening TSS Viewer

To open the TSS viewer workbook and its data server, follow these steps:


1. Run DSDataServer: The default location is in the Start Menu, in Programs -> DirectSOFT 4 -> DirectSOFT32 Data Server Tools -> DirectSOFT32 Data Server. Wait a moment until the data server has loaded.
2. Run the IMPAX TSS Viewer: The default location is in the Start Menu, in Programs -> IMPAX TSS System -> IMPAX TSS Viewer.
3. Select "Enable Macros" when Excel asks whether macros should be run:

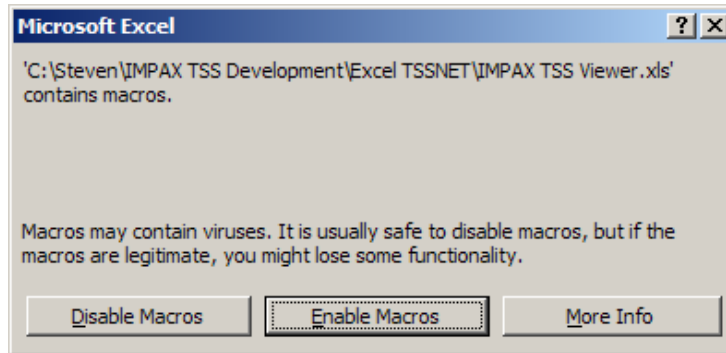

Note: If Excel does not ask about macros when opening, macros may be turned off. If this is the case, the TSS Viewer will not function correctly.

To ensure macros are enabled, open Excel and go to the Tools menu. Then select Macro, and then Security. Ensure that the Security Level setting is set to "Medium (You can choose whether or not to run macros)." Excel will need to be restarted after changing this setting.

4. Select "Update" when Excel asks whether data links should be updated:

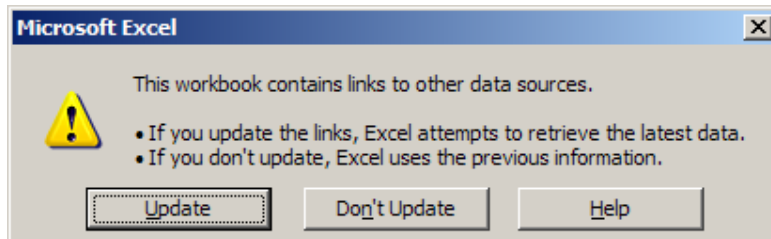


3.2: Closing TSS Viewer

To close the TSS viewer workbook and its data server, follow these steps:

1. Close the Excel file, by selecting Close or Exit from the File menu, or by clicking on the X in the upper-right corner of the window.

A save prompt will appear, but saving is only necessary if settings were changed:

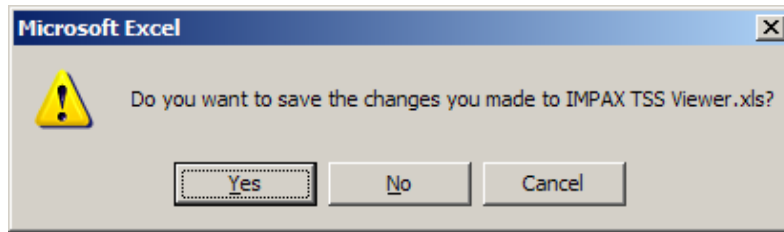


2. Close the data server, by selecting Exit from the File menu, or by clicking on the X in the upper-right corner of the window.

3.3: Navigation

When the TSS viewer workbook is open, several screens are available, each of which displays different data. To change which screen is active, use the buttons in the upper-right, or the tabs at the bottom of the workbook. The following screens are available:

Intro	Summary	Detail View
OEE View	Reporting	Setup

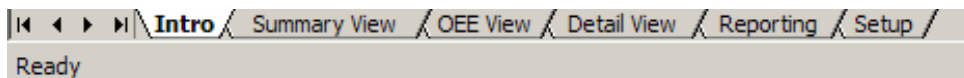

- **Introduction:** The screen that the workbook opens with
- **Summary View:** A visual overview of all monitored machines
- **Detail View:** A detailed look at data from a target machine
- **OEE View:** A summary of Overall Equipment Effectiveness
- **Reporting:** A screen for generating customizable reports
- **Setup:** A screen for setting up machine parameters and data collection settings

Other buttons similar to the main navigation buttons appear on each page. These buttons can be clicked to use the viewer's various features, as described in this manual. Many features are also available through an "IMPAX TSS System" menu that will appear in Excel's menu bar at the top of the screen. For more information on these features, see the section on menu options below.

4: Data Viewing

4.1: Summary View

IMPAX TSS Viewing System							Intro	Summary	Detail View
Summary View							OEE View	Reporting	Setup
Shop Floor Summary							Print this Page		
Machine Name	Machine Status	Current Status		Daily Status			View OEE Details	View Machine Details	
		Current PPM	PPM Efficiency	Current Production	Today's OEE				
Header 1	UP	95	95.0%	92%	33.00%	View Details			
Header 2	UP	97	97.0%	98%	30.15%	View Details			
Header 3	Down: 224m	0	0.0%	12%	11.43%	View Details			
Header 4	UP	102	102.0%	99%	92.66%	View Details			
Header 5	UP	82	82.0%	90%	89.75%	View Details			
Roller 1	UP	54	54.0%	62%	68.62%	View Details			
Roller 2	Down: 15m	0	0.0%	56%	55.55%	View Details			
Roller 3	Down: 75m	0	0.0%	1%	1.23%	View Details			
Roller 4	UP	87	87.0%	90%	89.54%	View Details			
Roller 5	UP	90	90.0%	86%	87.78%	View Details			

This screen provides an overview of production information for all monitored machines. Each machine is listed in its own row. If there are many machines, the list may be several pages long. The scroll bar on the right edge of the screen can be used to scroll through the pages. For each machine, the following data is presented:


- **Machine Name**
- **Machine Status:** whether the machine is UP or DOWN, and how long the machine has been in downtime (if applicable)
- **Current PPM:** current Parts Per Minute
- **PPM Efficiency:** a measure of the current PPM, divided by the ideal/target PPM set for that machine
- **Current Production:** good parts made this shift, divided by the number of parts expected this shift (based on target PPM)
- **Today's OEE:** current Overall Equipment Effectiveness, calculated in OEE View screen
- **"View Details" button:** shortcut to the Detail View screen

There is also a **"View OEE Details" button**, which is a shortcut to the OEE View screen (see below).

4.2: Detail View

This screen gives a detailed view of one machine's status. To begin viewing machine details, click on the drop-down menu at the top of the page and select a machine. Then wait until the machine's details are loaded. Several pages of details will be loaded, the scroll bar on the right edge of the screen can be used to scroll through the pages.

The first details listed are the machine's **Current Status**. This section displays whether the machine is UP or DOWN, what the machine's current RPM, PPM, and Scrap are, and what Job, Part, and Operator are active on the machine. Also listed is any current message entered by the machine's operator. The "Send New Message" and "View Message Log" buttons are available for communication with the machine.

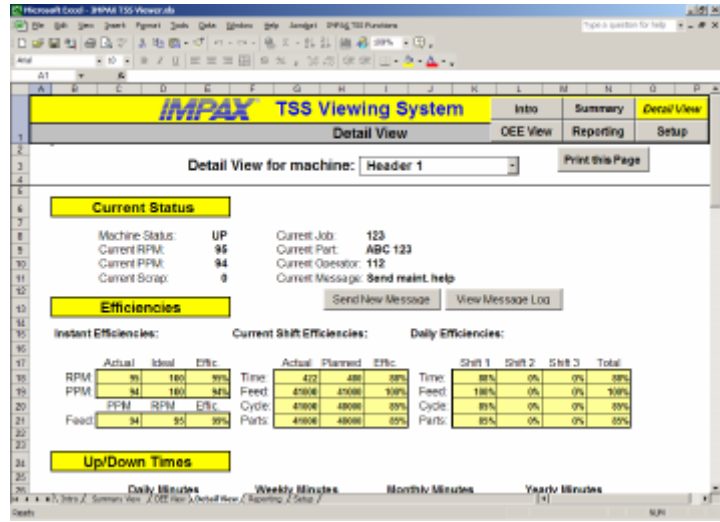

The next section of details is **Efficiencies**. The following machine efficiencies are displayed:

Instant Efficiencies (calculated each second):

- RPM Efficiency: Current RPM divided by ideal RPM
- PPM Efficiency: Current Parts Per Minute divided by ideal PPM
- Feed Efficiency: PPM divided by RPM, measures how machine cycles translate into parts

Current Shift Efficiencies:

- Time Efficiency: Uptime divided by total time
- Feed Efficiency: Parts made divided by machine cycles, measures how well machine cycles translate into good parts
- Cycle Efficiency: Machine cycles divided by cycles expected (calculated using ideal RPM)
- Parts Efficiency: Parts made divided by parts expected (calculated using ideal PPM)

Daily Efficiencies (listed for all shifts and for the day):

- Time Efficiency: Uptime divided by total time
- Feed Efficiency: Parts made divided by machine cycles, measures how well machine cycles translate into good parts
- Cycle Efficiency: Machine cycles divided by cycles expected (calculated using ideal RPM)
- Parts Efficiency: Parts made divided by parts expected (calculated using ideal PPM)

The next section of details is **Up/Down Times**. Totals are maintained for Uptime, Downtime, and Response Time. These totals are shown for all shifts and are totaled, and are also shown for the current day, week, month, and year. Note that this historical data is based on the historical totals kept in the TSS, not on the collected machine data kept in data files on a PC (See Data Collection below for more details).

	Daily Minutes			Weekly Minutes			Monthly Minutes			Yearly Minutes		
	Up	Down	Resp	Up	Down	Resp	Up	Down	Resp	Up	Down	Resp
Shift 1	472	21	0	472	21	0	276	10	27	7533	112	281
Shift 2	0	0	0	0	0	0	0	0	0	15	1034	840
Shift 3	0	0	0	0	0	0	0	0	0	15252	351	184
Total	472	21	0	472	21	0	276	10	27	4569	1799	112

The next sections of details are for counts. The first section, **Production Counts**, shows current data from the Order Counter, as well as production counts for all shifts (and totals), for the current day, week, month, and year.

The following sections show current data for all **Tool Counters** and **Maintenance Counters** being used at the machine. Drop-down menus in these sections provide a way to automatically color counters yellow or red, based on how close they are to their “expected life” values. Standard percentages can be selected in these drop-down menus, or custom values from 1 to 100 can be typed in manually.

	OBSL	CHSEL	TOOL 3	TOOL 4	TOOL 5	TOOL 6	TOOL 7	TOOL 8	TOOL 9
Expected Life:	10000	10000	0	0	0	0	0	0	0
Life Used:	100	100	0	0	0	0	0	0	0
Life Remaining:	0	0	0	0	0	0	0	0	0

The next section of details is **Downtime Reasons**. This section lists the number of occurrences (Occur) and total time in minutes (Time) spent in downtime. Number of Occurrences and Time totals are shown for the current day, week, month, and year. Data for downtime reasons 1 through 16 is shown by default; to view data for reasons 17-32, 33-48, or 49-64, click on the drop-down menu next to "Show Codes" and select the reasons of interest. The new set of reasons will then load.

Code	Description	Daily Codes		Weekly Codes		Monthly Codes		Yearly Codes	
		Occur	Time	Occur	Time	Occur	Time	Occur	Time
1	MACHINE SETUP	4	45	12	746	12	296	52	2608
2	MAINTENANCE	2	22	10	56	18	31	11	52
3	PART CHANGE	8	8	2	15	7	10	7	15
4	ORDER COMPLETE	8	8	5	225	9	225	9	225
5	SMASHUP	8	8	1	102	12	182	52	162
6	BREAKDOWN	2	85	4	1893	6	1182	8	1853
7	TOOL ADJUST	8	8	4	168	5	118	4	160
8	TOOL CHANGE	8	8	8	0	0	8	8	8
9	SAMPLES	8	8	1	5	1	5	1	5
10	FEED PROBLEMS	8	8	0	0	0	8	8	8
11	MATERIAL QUALITY	8	8	0	0	0	8	8	8
12	WAITING FOR MATERIAL	8	8	0	0	0	8	8	8
13	MEETING/TRAINING	8	8	0	0	0	8	8	8
14	WAITING FOR OPERATOR	8	8	0	0	0	8	8	8
15	WORKING ON OTHER MA	8	8	0	0	0	8	8	8
16	SCHEDULED SHUTDOWN	8	8	0	0	0	8	8	8

The final section of details is **Downtime Occurrences**. This section lists the Downtime Log entries from the TSS, which record each instance of downtime. Data for the last 8 downtime occurrences is shown by default; to view data for previous occurrences 9-16, 17-24, or 25-32, click on the drop-down menu next to "Show Occurrences" and select the ones of interest. The new data will then load.

Occurrence	Start Time	End Time	Resp. Time	Dows Time	Downtime Code	Downtime Reason
1	1335	1344	2	0	8	MAINTENANCE
2	1381	1328	0	26	8	MACHINE SETUP
3	1258	1305	5	2	8	MAINTENANCE
4	1181	1347	2	40	6	BREAKDOWN
5	0	0	0	0	0	
6	0	0	0	0	0	
7	0	0	0	0	0	
8	0	0	0	0	0	

4.3: OEE View

IMPAX TSS Viewing System													
OEE View											Intro	Summary	Detail View
											OEE View	Reporting	Setup
Overall Equipment Effectiveness (OEE) Summary													
Machine Name	Today's Scheduled Time	Today's Downtime	Today's Available Time	Availability Percent	Today's Parts Made	Ideal PPM	Today's Performance Percent	Today's Parts Made	Today's Scrap Parts	Quality Percent	OEE Percent		
	A	B	C	D	E	F	G	H	I	J	K		
	(A)	(B)	(C/A)	(D/A)	(E)	(F)	(G)	(H)	(I)	(J)	(K)		
	(A - B)	(C/A)	(E / (F * G))	(I - J) / J	(D * H * K)								
Header 1	1440	22	1418	98.47%	41253	100	1418	29.09%	41253	0	100.00%	28.85%	
Header 2	1440	45	1395	96.88%	40553	100	1395	28.88%	40553	0	100.00%	27.95%	
Header 3	1440	206	1234	85.69%	32583	100	1234	28.39%	32583	0	100.00%	22.81%	
Header 4	1440	2	1438	99.86%	42581	100	1438	29.61%	42581	0	100.00%	29.87%	
Header 5	1440	60	1380	95.83%	40128	100	1380	29.08%	40128	0	100.00%	27.87%	
Roller 1	1440	16	1424	98.89%	41866	100	1424	29.39%	41866	0	100.00%	28.87%	
Roller 2	1440	381	1059	73.54%	38542	100	1059	30.39%	38542	0	100.00%	26.77%	
Roller 3	1440	420	1020	70.83%	32684	100	1020	32.04%	32684	0	100.00%	22.70%	
Roller 4	1440	43	1397	97.01%	35665	100	1397	28.62%	35665	0	100.00%	27.77%	
Roller 5	1440	29	1411	97.99%	40854	100	1411	28.95%	40854	0	100.00%	28.37%	

This screen displays calculations of current Overall Equipment Effectiveness (an efficiency metric) for all machines. Based on data from the machine, OEE is calculated continuously.


OEE is based on three percentages, which are calculated based on machine data:

- **Today's Scheduled Time:** total time in minutes allotted for today's schedule
- **Today's Downtime:** total time spent down today
- **Today's Available Time:** the difference between Today's Scheduled Time and Today's Downtime
- **Availability Percent:** Today's Available Time divided by Today's Scheduled Time, represents how available the machine has been for production
- **Today's Parts Made:** total good parts produced today
- **Ideal PPM:** the ideal/target PPM set for the machine
- **Performance Percent:** Today's Parts Made divided by Today's Expected Parts (which is the Ideal PPM times Today's Available Time), represents how many parts a machine has made compared with how many it should have made
- **Today's Scrap Parts:** total bad parts produced today (note that this requires custom programming for each machine, and will otherwise be zero)
- **Quality Percent:** the difference between Today's Parts Made and Today's Scrap Parts, divided by Today's Parts Made, represents the quality of production.

Overall Equipment Effectiveness is then calculated by multiplying the three percentages. OEE sums up the machine's availability, performance, and quality. OEE starts at zero each day, and works its way up towards 100% at the end of the day (assuming production remains on target).

4.4: Menu Options

Many features are available through the "IMPAX TSS System" menu that will appear in Excel's menu bar at the top of the screen:

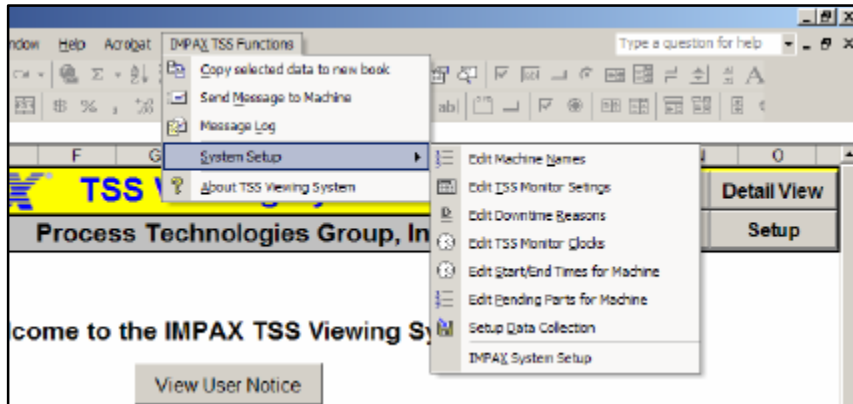

Copy selected data to a new book

This feature is only available through the menu. When selected, this function copies any data currently selected, creates a new workbook, and pastes the data there. This is useful for running an analysis or making a graph based on the data, without interfering with the TSS system.

Send Message to Machine / Message Log

These message-sending features are explained in the System Setup section below.

System Setup

The features in this sub-menu are explained in the System Setup section below. The "IMPAX System Setup" option is for IMPAX engineering use only.



About TSS Viewing System

This option displays information about the TSS Viewing System, including version information, contact information for IMPAX, and the user notice.

4.5: Printing

All screens with machine data have a "Print this Page" button. Clicking this button will put Excel into Print Preview mode and format the page for printing. From Print Preview mode, the page can be printed by clicking "Print..." Once the screen is printed, "Close" can be clicked to return to the data screen.

For example, pressing the print button on the Summary screen will format the screen for printing:

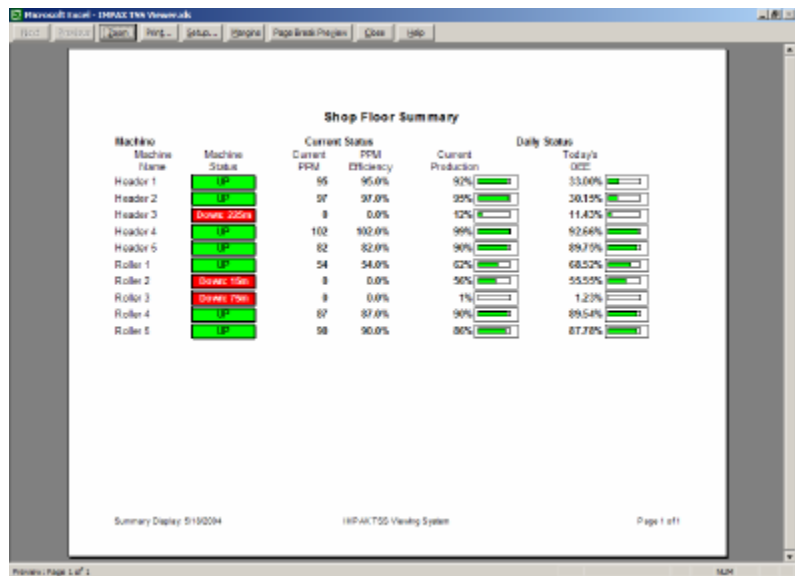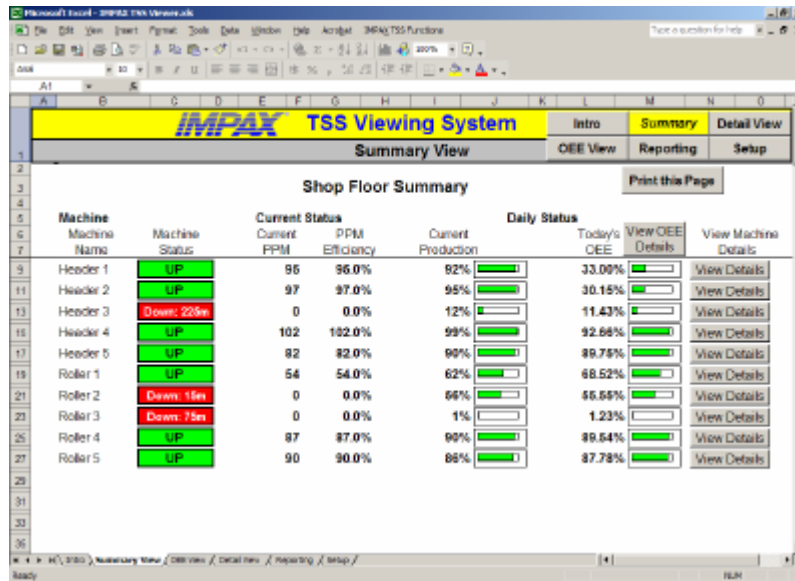

5: Data Collection and Reporting

5.1: Overview

In addition to viewing daily, weekly, monthly, and yearly data from connected TSS monitors, the TSS Viewing System also supports data collection to PC. Machine data can be collected periodically from all machines, and can be recorded on the local PC to create a historical record containing all machine data.


Several types of data can be collected:

- **Machine History Data:** The record of all production, uptime, and downtime experienced by each machine each day
- **Downtime Occurrence Log:** The daily log of downtime occurrences
- **Part and Operator Data:** The record of production for each session (a session is a combination of job number/part number/operator ID)


This data is periodically collected from all machines, and saved to files on the computer's hard drive. Machine history data and downtime occurrence logs are saved once per day. Downtime occurrence logs are also saved when the log fills up on any machine. Part and operator data are saved whenever a new job number, part number, or operator ID is entered into a TSS. Each TSS has memory buffers to hold this information until it is collected, but the PC must be able to connect to each TSS at least once a day to collect data, or data will be lost.

5.2: Data Collection Settings

Several settings control how data is collected. These settings can be changed through the System Setup screen, in the lower-right corner. Clicking the "Setup Data Collection" button will bring up a window where the settings can be changed. Data collection for daily data (machine history data and downtime logs) and for parts/operators can be turned on or off. Also, the folder where the data files will be saved can be customized (This folder can be on the local PC, like "C:\Data", or a network shared folder, like "\\Server123\Data"). Note that these settings are saved in the Excel workbook, so that if they are changed, the workbook should be saved by selecting "Save" from the "File" menu afterwards.

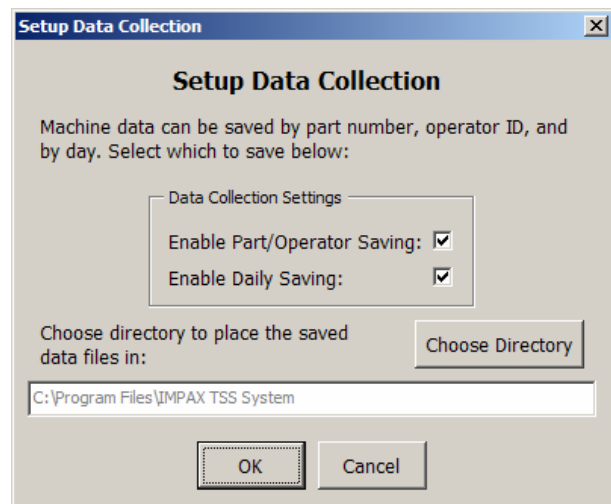

The area of the System Setup screen under the data collection settings is a message display area to report on the status and progress of saving data. Whenever any saving is turned on or off for a machine, and whenever a set of data is saved, a message will display here. Any errors encountered will also be displayed here.

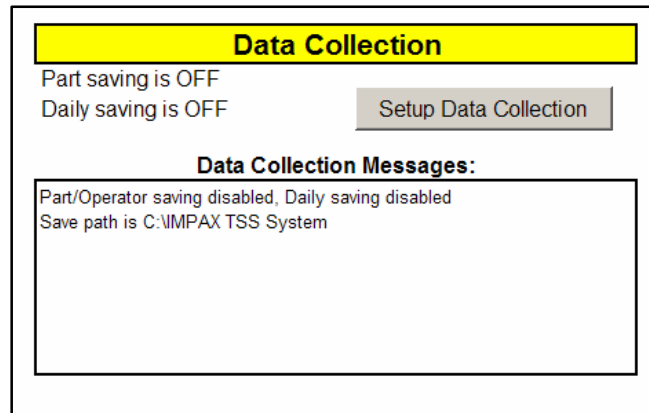

5.3: Saved Data Files

Saved Data is automatically placed in files called "SavedPartsAndOperators.csv", "SavedDailyData.csv", and "SavedDowntimeLog.csv" in the directory specified by the data collection settings. These files are in comma-separated/comma-delimited values format. The first line of each file contains descriptive headers, and each following line contains data for one saved job/part/operator, day from one machine, or downtime occurrence. The files can be opened in any text editor or Excel, but copies should be made for editing or they should be opened as "Read-only" if the TSS Viewing System is still running, so that the system is able to save any new data. The files can also be safely deleted or moved to an archive folder at any time the system is not saving new data; the system will start over with a new blank file.

5.4: Generating Reports

Reports can be generated based on the saved data files, using the Reporting Screen. To generate a report, click on the "Generate New Report" button, and a window will appear with the following options:

Choose which data to report on

Reports can be based on either machine history data, downtime occurrence logs, or part/operator data. Which data type is chosen may determine which reporting options are available.

Choose dates to be included in report

Data for the reports is filtered by the chosen start date and stop date: only data between the two dates is shown. Dates may be entered in MM/DD/YYYY format or in any Excel date format.

Choose dates to be included in report

Data for the reports can be filtered by machine. If filtering is used, only data from the selected machines is shown. Press "Select Machines" to bring up a menu for selecting machines to use.

Choose format of report

Two types of reports can be generated: list reports and summary reports. List reports list all data records that match the date filter, and are good for looking at or sorting all data records. Summary reports combine the data records to generate totals, and are good for looking at summaries of aggregate data.

Choose order to sort listed records or to group summarized records

Report data is sorted (and optionally sub-sorted) by the chosen categories. Entries in a list report are simply sorted. Entries in a summary report are sorted by the chosen category, and grouped by that category to produce totals.

Choose data fields to list or summarize

The data fields chosen here are the ones that will form the actual data of the report. Which data fields are available is determined by the other report settings.

Once the desired settings are entered, clicking on "Generate Report" will save the settings and build a new report based on the chosen options. The report will then appear in the Reporting Sheet. From there, it can be viewed or printed (using the "Print this Page" button). The report is current as of the moment it was generated; it will not update as new data is collected. The Reporting screen can be cleared by using the "Clear Report" button.

When a report is generated, the IMPAX header and navigation buttons may be temporarily distorted due the columns being resized. This is a known Microsoft-acknowledged bug.

Note that reporting settings and the current report are saved in the Excel workbook, so they will only be kept if the workbook is saved (select "Save" from the "File" menu to save).

Generate New Report

To generate a report, fill in the options below, and click on "Generate Report."

Report Data
1. Choose which data to report on: Part/Operator Data

Date Filter
2. Choose dates to be included in report:
Start Date: 1/1/2000 Stop Date: 1/1/2010

Machine Filter
3. Choose machines to be included in report: Select Machines
Current filter: 1 of 2 machines included.

Report Type
4. Choose report format: List Report: list all matching data sessions
 Summary Report: combine sessions to produce totals


Grouping
5. Choose order to sort listed records or to group summarized records:
Group By: Part Number Sub-Group By: Job Number

Data Fields to Include
6. Choose data fields to list or summarize:

Uptime	Downtime	Resp. Times	Counts	Cycles	Other
<input checked="" type="checkbox"/> Shift 1	<input checked="" type="checkbox"/> Shift 1	<input type="checkbox"/> Shift 1	<input checked="" type="checkbox"/> Shift 1	<input type="checkbox"/> Shift 1	<input type="checkbox"/> Downtime Times/ Occurrences Number of reasons: 8
<input checked="" type="checkbox"/> Shift 2	<input checked="" type="checkbox"/> Shift 2	<input type="checkbox"/> Shift 2	<input checked="" type="checkbox"/> Shift 2	<input type="checkbox"/> Shift 2	
<input checked="" type="checkbox"/> Shift 3	<input checked="" type="checkbox"/> Shift 3	<input type="checkbox"/> Shift 3	<input checked="" type="checkbox"/> Shift 3	<input type="checkbox"/> Shift 3	
<input checked="" type="checkbox"/> Total	<input checked="" type="checkbox"/> Total	<input type="checkbox"/> Total	<input checked="" type="checkbox"/> Total	<input type="checkbox"/> Total	
					<input type="checkbox"/> Scrap

Generate Report Cancel

6: System Setup

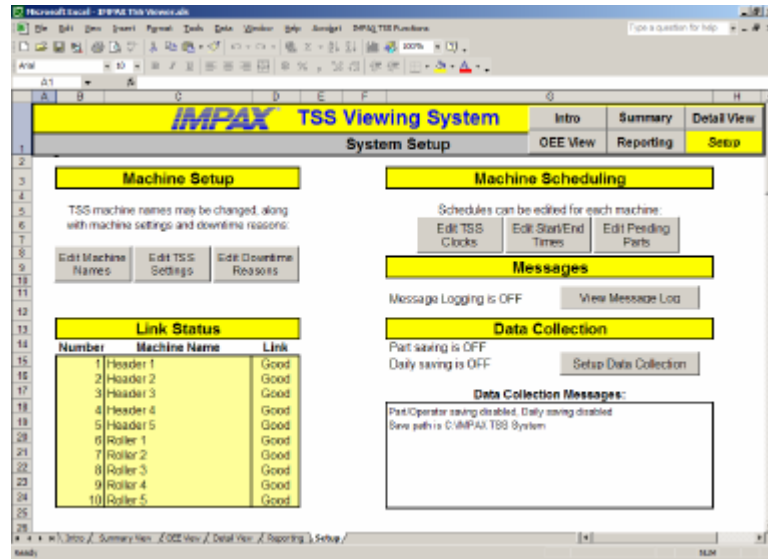

The System Setup screen allows access to the settings that control the TSS Viewing System, and to settings for the networked TSS monitors. These settings can be accessed by clicking on the appropriate buttons.


6.1: Editing Machine Names

The names that are used to refer to machines can be edited by clicking the "Edit Machine Names" button. A window will appear allowing name entry for each machine.

Each name should be unique, to help distinguish them and so that their data is unique when saved to disk. Also, machine names should not be changed after they are initially set, because collected data is stored based on machine names.

The number of machines can also be changed by choosing a new number, and pressing the "Change Number of Machines" button, in case additional monitors are installed.


When machine names have been entered, click "OK" to save them. Note that the names are saved in the Excel workbook, so that if they are changed, the workbook should be saved by selecting "Save" from the "File" menu afterwards.

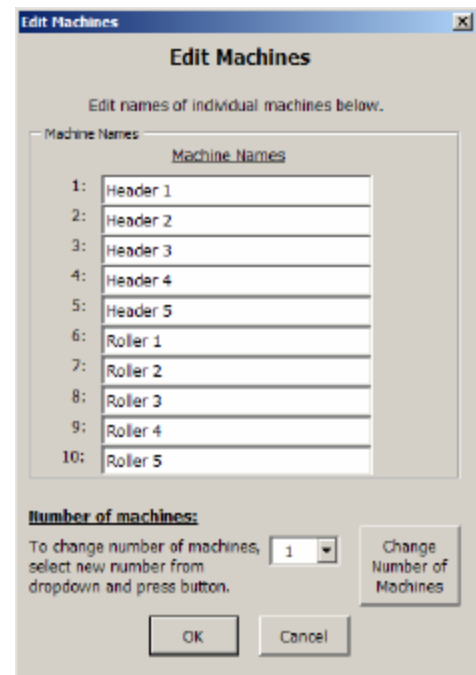

6.2: Editing Machine Settings

The settings that control each TSS monitor's operation can be viewed and edited by clicking the "Edit Machine Settings" button. This will bring up a window for the TSS settings.

To view the settings from a machine, select the machine from the drop-down menu in the upper-right. Then click on "Load from Selected Machine." The TSS Viewing System will then load the settings, and after a few seconds they will display. Settings can then be viewed or changed. Help on what the various TSS settings mean is available: click on "Help With These Settings" to bring up a window with explanations of each setting and valid values for all settings.

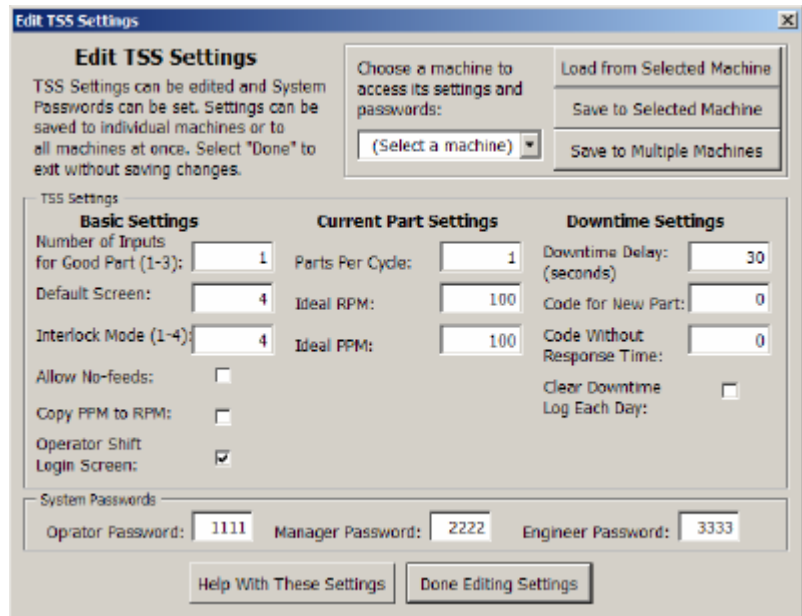


Settings will not be saved back to any TSS unless one of the "save" buttons is clicked. To save settings, select the machine to save to from the drop-down menu, and click on "Save to Selected Machine." Or, click on "Save to Multiple Machines" to bring up a window that will allow saving to more than one machine at once. Once a message window appears to confirm the save, clicking on "Done Editing Settings" will close the window.

Settings will not be saved back to any TSS unless one of the "save" buttons is clicked. To save settings, select the machine to save to from the drop-down menu, and click on "Save to Selected Machine." Or, click on "Save to Multiple Machines" to bring up a window that will allow saving to more than one machine at once. Once a message window appears to confirm the save, clicking on "Done Editing Settings" will close the window.

6.3: Editing Downtime Reasons

The downtime reasons used at each machine can be edited by clicking the "Edit Downtime Reasons" button. This will bring up a window containing fields for all downtime reasons.

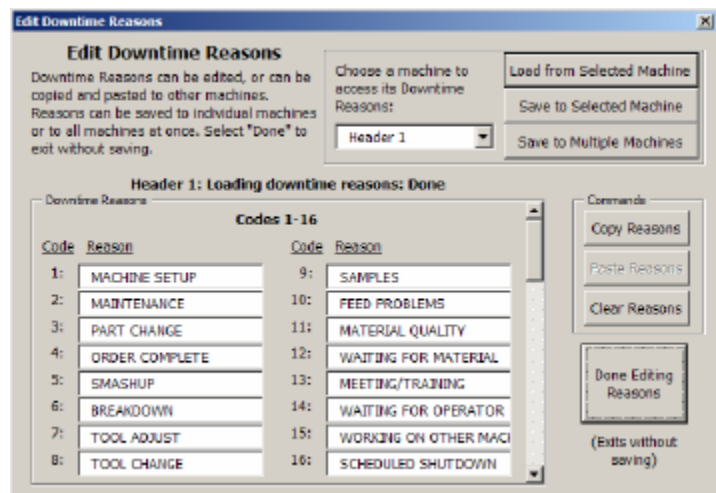


To view the downtime reasons for a machine, select the machine from the drop-down menu in the upper-right. Then click on "Load from Selected Machine." The TSS Viewing System will then load the reasons, and they will display as they are loaded. Reasons can then be viewed or changed. Reasons can also be copied to a temporary buffer by clicking "Copy," and then pasted back by clicking "Paste." To clear the downtime reasons, click "Clear."

Downtime reasons will not be saved back to any TSS unless one of the "save" buttons is clicked. To save reasons, select the machine to save to from the drop-down menu, and click on "Save to Selected Machine." Or, click on "Save to Multiple Machines" to bring up a window that will allows saving to more than one machine at once. Once a message window appears to confirm the save, clicking on "Done Editing Reasons" will close the window.

6.4: Setting Machine Clocks

The clocks of each networked TSS monitor can be set by clicking the "Edit Machine Clocks" button. The will bring up a window with fields for the time and date.

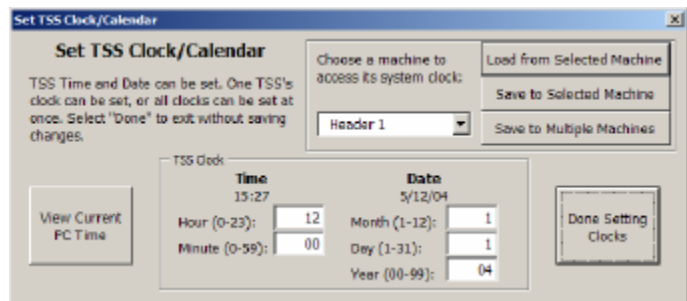

To view the current time/date set at a machine, select the machine from the drop-down menu in the upper-right. Then click on "Load from Selected Machine." The TSS Viewing System will then load the clock values, and after a few seconds they will display. Values for the time and date can then be viewed or changed. The clock values can also be copied from the current PC clock time by clicking "View Current PC Time."

No TSS clock will be set unless one of the "save" buttons is clicked. To save the clock values, select the machine to save to from the drop-down menu, and click on "Save to Selected Machine." Or, click on "Save to Multiple Machines" to bring up a window that will allows saving to more than one machine at once. Once a message window appears to confirm the save, clicking on "Done Editing Clocks" will close the window.

6.5: Setting Machine Schedules

The schedules used by each networked TSS monitor can be reviewed and edited by clicking the "Edit Start/End Times" button. The will bring up a window with fields for a weekly schedule.

To view the current weekly schedule for a machine, select the machine from the drop-down menu in the upper-right. Then click on "Load from Selected Machine." The TSS Viewing System will then load the schedule, and after a few seconds it will display. Shift start times, end

times, and total work minutes are shown for all three shifts, and the whole day, for each day of the week. The schedule can be changed by entering new time values for each day of the week, and/or for the current day. Refer to the section below for information on editing the times. Times can also be copied and pasted: individual days can be copied and pasted into other days, or the entire schedule can be copied/pasted across machines, via the "Copy"/"Paste" buttons.

Work minutes and total work minutes can also be entered. These values represent the total amount of available minutes in each shift of the indicated period. This is used for calculating percentages and efficiencies by TSS monitors. They can be calculated automatically (if "Automatically Calculate Work Minutes" is checked), manually by clicking on "Calculate Work Minutes," or they can be entered by hand.

No TSS schedule will be saved unless one of the "save" buttons is clicked. To save the schedule, select the machine to save to from the drop-down menu, and click on "Save to Selected Machine." Or, click on "Save to Multiple Machines" to bring up a window that will allow saving to more than one machine at once. Once a message window appears to confirm the save, clicking on "Done Editing Times" will close the window.

Tips for Editing Machine Schedules

Shift start times, end times, and total work minutes are shown for all three shifts, and the whole day, for each day of the week. Times are grouped by day of the week, with the current day's times listed after Saturday's times. When a day ends, the next day's times are loaded and placed into the Current Day times. Times are also loaded whenever the monitor is turned on.

Start/End times should be set carefully! The monitor will only record data when the current time is within the defined daily period AND within a shift period. Anything that happens outside of these windows will be ignored. If times are set incorrectly, data loss/corruption can occur.

All times are in 24-hour time: hours range from 0-23, and minutes range from 0-59. The time 0:00 is 12:00am, and 23:59 is 11:59pm. To enter the daily period, enter the hour and minutes for the Day Start Time and the Day End Time. The daily period will last from the first second of Day Start Time to the last second of Day End Time. For example, a 10:00am to 4:00pm shift should be entered as 10:00 to 15:59. The Day Start Time should be less than the Day End Time, unless the daily period goes through midnight. For example, a 10:00pm to 4:00am shift would be 22:00 to 3:59. No day may last more than 24 hours. Adjacent days should not overlap. Note: if the daily period is set to begin at or after 18:00 (6:00pm), the day will actually begin at that time on the previous calendar day (a Day Start Time of 22:00 will start the previous day at 10pm).

Shift start and end times are entered similarly. Shifts can go through midnight, but should not go through the start or end of the daily period. All active shifts should fall within the daily period. Two shifts should not overlap. A shift can be turned off by setting its start and end times to 0:00.


A sample schedule is shown below, in which Monday-Thursday are 24-hour days with three 8-hour shifts, Friday is a 20-hour day with two 10-hour shifts (where shift two goes through midnight), and Saturday and Sunday are disabled.

Disabling Days

A day can be disabled by setting its start and end times to be equal. This will turn off all uptime/downtime monitoring on that day. Even when a day is disabled, the TSS checks for the start of a week/month/year at that day's start time. This means that disabled days' times should be set so that no day is skipped. For example, if Friday's shifts run until 1:59am Saturday morning, Saturday's start and end times should be set to 02:00 or later so that if Saturday starts a new month, monthly data will be reset correctly. For another example, if Monday's shift 1 starts at 10:00pm Sunday night, Sunday's end time should be set earlier than 10:00pm, so that Monday's times can be loaded correctly.

6.6: Editing Pending Parts

Each machine can have up to four pending parts, which are records for part jobs that have not yet started, but that an operator can start with the press of a button. The pending part records can be edited by clicking the "Edit Pending Parts" button. This will bring up a window containing fields for all four pending parts.

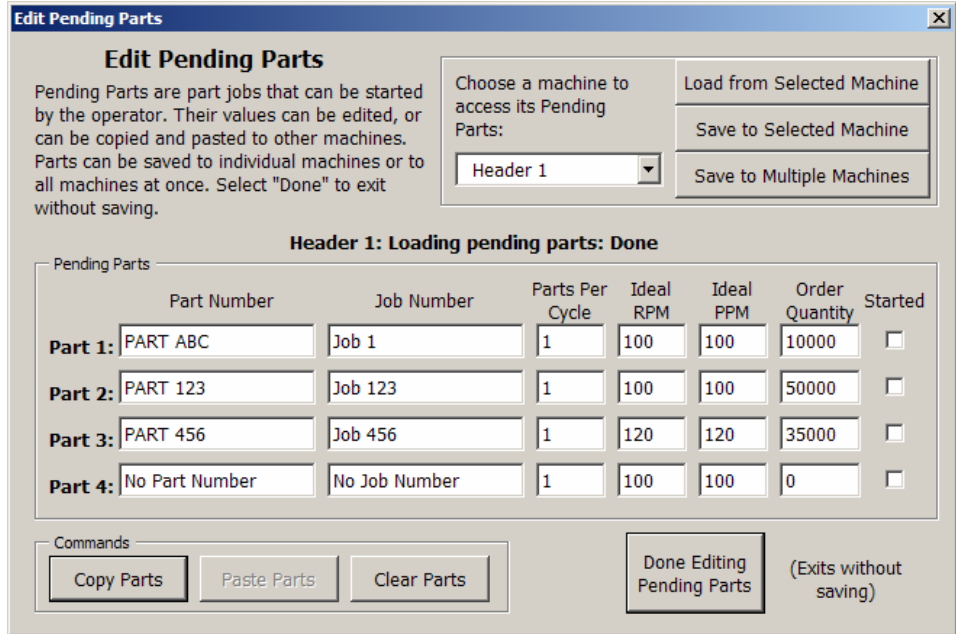


To view the pending parts for a machine, select the machine from the drop-down menu in the upper-right. Then click on "Load from Selected Machine." The TSS Viewing System will then load the fields, and they will display as they are loaded. Fields for each pending part can then be viewed or changed. All the fields can also be copied to a temporary buffer by clicking "Copy," and then pasted back by clicking "Paste." To clear the fields, click "Clear."

Pending parts will not be saved back to any TSS unless one of the "save" buttons is clicked. To save parts, select the machine to save to from the drop-down menu, and click on "Save to Selected Machine." Or, click on "Save to Multiple Machines" to bring up a window that will allow saving to more than one machine at once. Once a message window appears to confirm the save, clicking on "Done Editing Pending Parts" will close the window.

6.7: Viewing and Sending Messages

Messages can be sent to and from machines through the messaging interface. Messages can be viewed and sent by clicking the "View Message Log" button. This will bring up a window showing the message log.


To use the log, ensure it is enabled (Click "Enable Message Logging" and then "Apply" or "OK.") Once enabled, messages sent to machines and received from machines will be displayed in the log. The log automatically updates periodically; to force an immediate update, click the "Check for new messages now" button. The log can be cleared by pressing the "Clear Message Log" button.

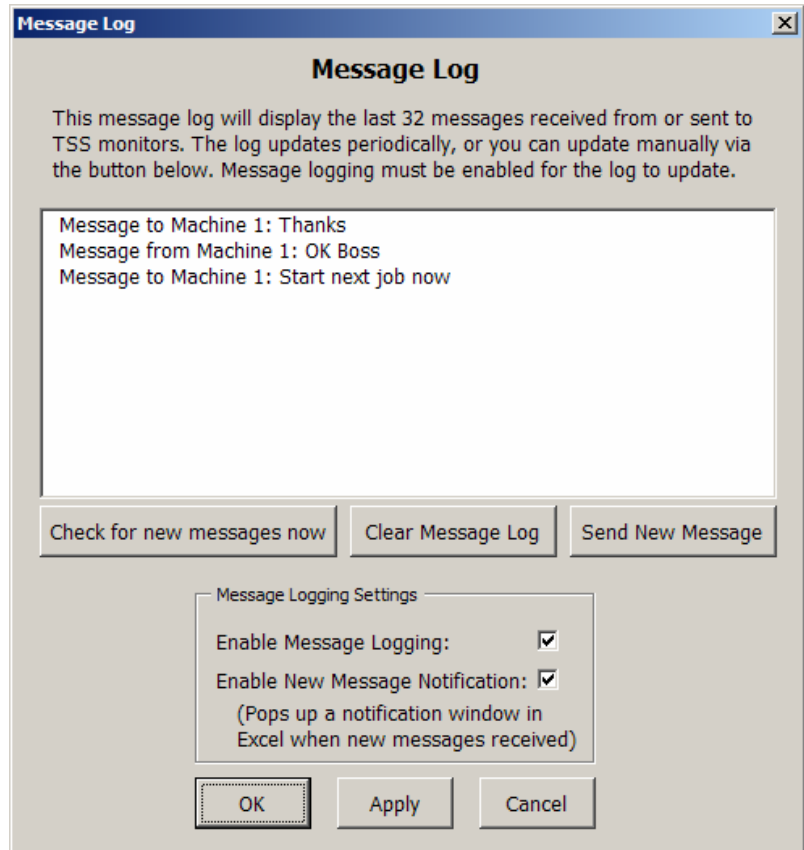

Note that the message log and settings are saved in the Excel workbook, so if they are changed, the workbook should be saved by selecting "Save" from the "File" menu afterwards.

New Message Notification

To receive notification whenever a new message is received even when the log is not active (such as when another screen is being viewed), click "Enable New Message Notification" and then "Apply" or "OK." Now, when the message log is closed, a notification window will appear whenever a new message is received.

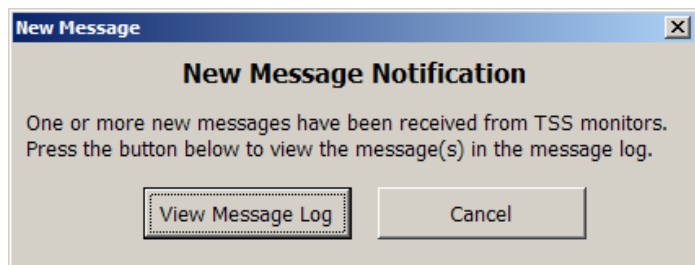

Sending Messages

To send a message to a machine, press the “Send New Message” button (or one of the other send message buttons throughout the TSS Viewer). This will open the Send Message window. To send a message, first select which machine(s) to send the message to (use "Send to Multiple Machines" to send to more than one machine). Then enter the desired message (limited to 20 letters/numbers). Then press "Send Message" to send the text to the chosen machines (if "Send to Multiple Machines" was selected, a separate window will appear for selecting which machines to send to). The message will then be sent to the TSS Monitor(s), and displayed for the operator(s). The message will also be entered into the message log, if message logging is enabled.

